



ESD Cleaning Guidelines

RECOMMENDED TOOLS



Broom




Mop & Bucket

Rotary Scrubber



Hoover

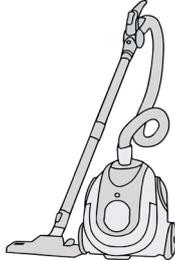

Wet Vac

BEFORE YOU START

Failure to maintain Ecotile flooring in accordance with recommended maintenance and cleaning procedures may affect the performance of the product and the product warranty.


Remember, all floors scuff and scratch when sharp objects are dragged across them. Treat your floor tiles with the care you would other floor coverings.

Please ensure that you consult the health and safety data sheet for any cleaner, sealer or polish you intend to use. This will be available on the manufacturer's website. Failure to follow the manufacturer's instructions for the use of cleaners and sealers may affect their performance.

Ecotile cannot be held responsible for problems arising from the use of cleaning products.

RECOMMENDED MANUAL CLEANING INSTRUCTIONS

Step 1: Sweep or vacuum the floor to remove any dust, dirt or large debris.

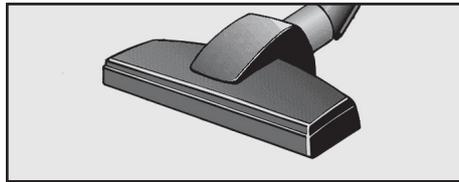


Step 2: Following the manufacturer's instructions, apply a **Neutral pH ESD Floor Cleaner** to the floor in correct dilution and leave for several minutes. The dilution rate may depend on how dirty the floor is - refer to the manufacturer's guidelines.

Step 3: Scrub the floor with a micro fibre mop or suitable cleaning pad (green or red). - refer to the manufacturer's cleaning guidelines for the cleaning product.




Step 4: Rinse the floor with clean water, removing the dirty water from the floor with a mop and allow to dry. Use a double bucket to ensure that the floor is rinsed well with clean water.

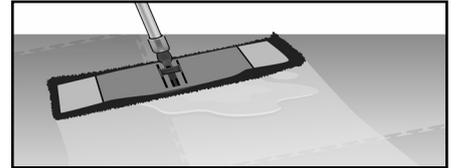


RECOMMENDED MECHANICAL CLEANING INSTRUCTIONS

Step 1: Sweep the floor to remove any dust, dirt or large debris.

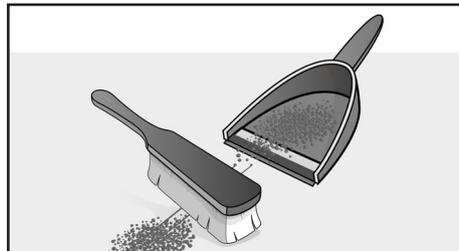

Step 2: Following the manufacturer's instructions, apply a **Neutral pH ESD Floor Cleaner** to the floor in correct dilution and leave for several minutes. The dilution rate may depend on how dirty the floor is - refer to the manufacturer's guidelines.

Step 3: Mechanically scrub the floor using either a green or red pad at no more than 400rpm or use a soft bristle brush for cylindrical rotary scrubber dryers. Please refer to the machine manufacturer's guidelines and use the appropriate pad or brush for vinyl flooring.

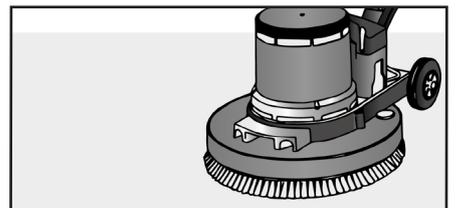

Step 4: Wet vacuum the residue and then rinse the floor with warm, clean water and vacuum dry.

ROUTINE MAINTENANCE

Develop a regular cleaning program suited to the usage and traffic of the area. Heavy traffic or highly visible areas need to be cleaned more often than other areas which are seldom used or where appearance is less important.

The most effective method of cleaning Ecotile is by rotary scrubber dryer. Care should be taken to select the correct pad. For example, medium pads, soft nylon or polypropylene

Have dedicated cleaning equipment (mops and buckets) that you use exclusively for your ESD floor. Do not use the same equipment for ESD and non-ESD floors.

To remove rubber heel marks by abrasion, use the correct machine pad or scrub by hand using baking soda, a white eraser or WD-40 ensuring that you rinse the floor well afterwards.

All newly laid floors should be covered and protected from trade and construction work with a suitable non-staining protective covering.

Remember that dirty equipment, particularly mops, do not clean but merely redistribute the dirt.

FLOOR POLISH & SEALERS

We **do not** recommend sealing Ecotile ESD floors as they will inhibit the conductive properties of the flooring.

If you have any concerns about cleaning your floor, you can contact us here:
+44 (0)1582 788 232 or enquiries@ecotileflooring.com

RECOMMENDED CLEANING & SEALING PRODUCTS

Ecotile recommend the following cleaners and sealers, other manufacturer's products may also be suitable.

✦ ESD Floor Cleaner - **Statguard ESD Floor Cleaner**